

MUSTIQUE DIGITAL TELEVISION RE-TUNE STEPS: WHITE 'KONKA' BOX



Using the Remote Control, follow these steps to re-tune your TV BOX

- 1. Press "Menu"**
- 2. Highlight "Channels>Delete all Data" and Press OK**
- 3. Press "OK", enter the password (Default = 0000) and press "OK"**
- 4. Wait for "Operation is finished!" and press "Exit"**
- 5. Highlight "Yes" and press "OK"**
- 6. After searching you will be returned to programming**